



WIRING DIAGRAM

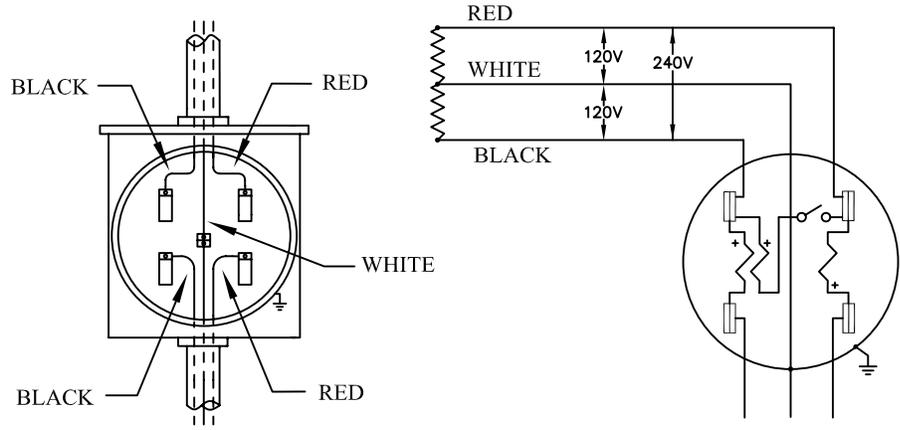

- NOTES:**
1. MAST CLAMP AND INSULATOR ASSEMBLY TO BE SUPPLIED AND INSTALLED BY BBEC PERSONNEL.
 2. DEPENDENT ON YOUR SERVICE INSTALLATION, A MAIN BREAKER MAY BE REQUIRED. CONTACT AN ELECTRICIAN OR STATE L & I PRIOR TO INSTALLING YOUR METERING EQUIPMENT.
 3. RESPONSIBILITY:
 - Ⓢ COOPERATIVE (BBEC)
 - Ⓜ MEMBER
 4. MEMBER CONDUCTORS TO BE MARKED AS SHOWN IN METER BASE AND ON EXPOSED TAILS.

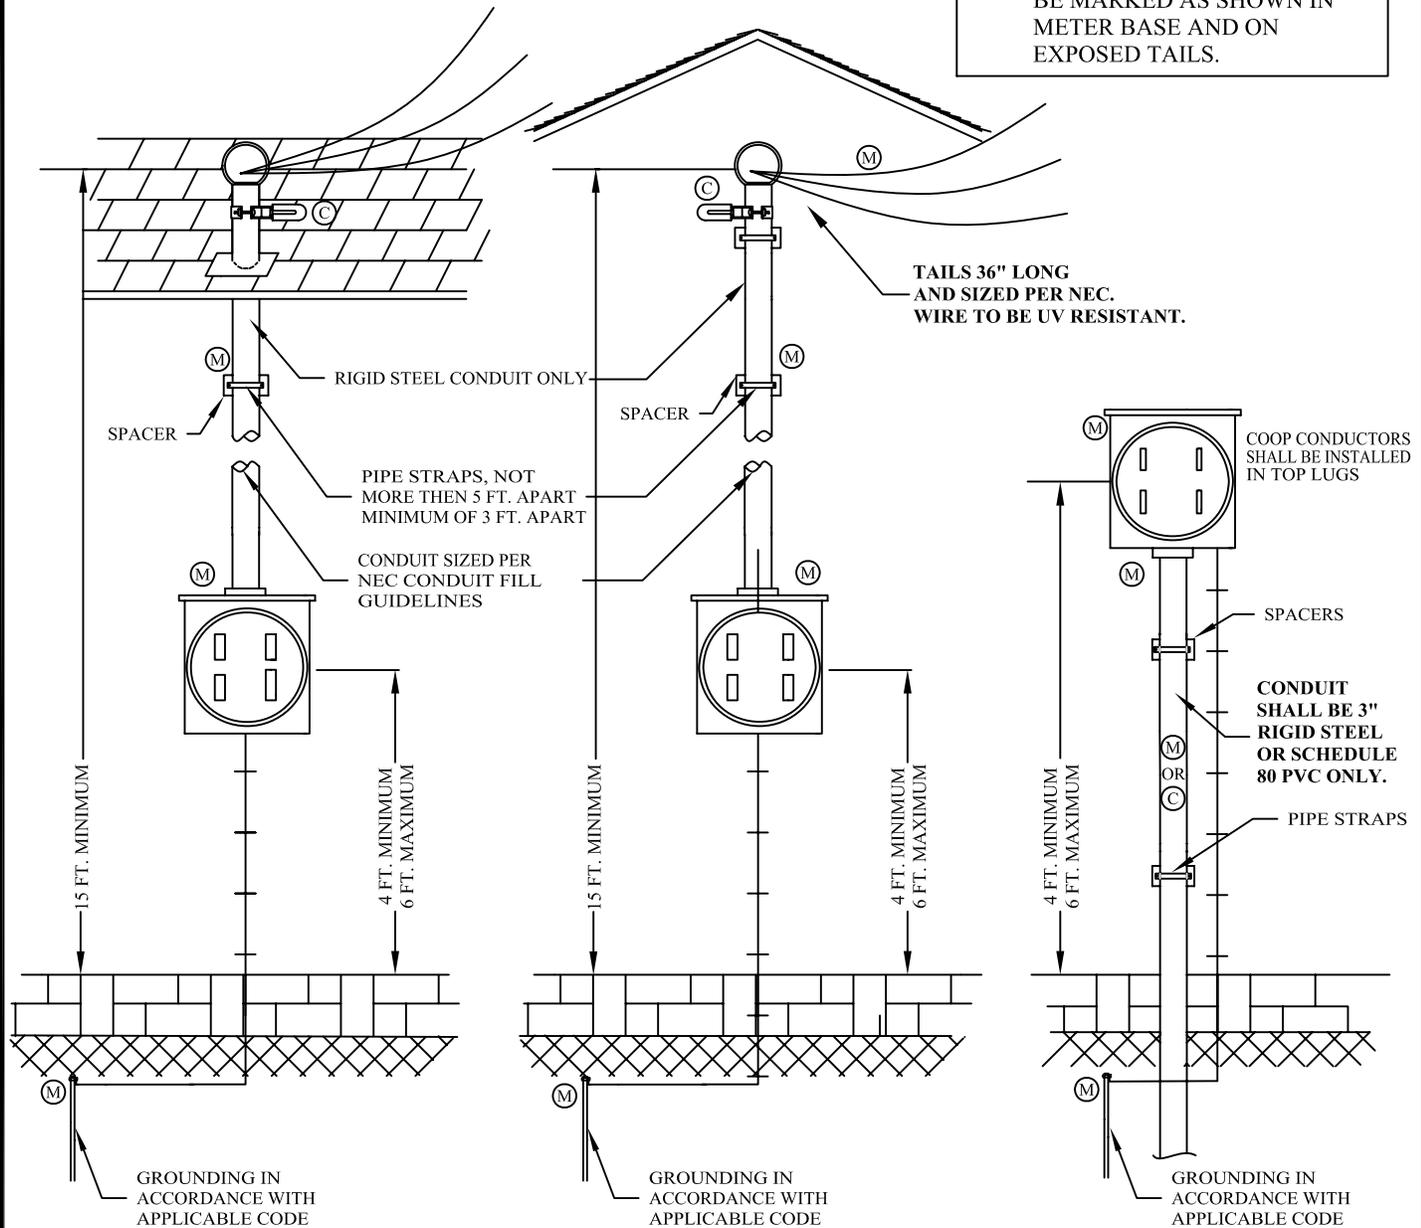

SEE SERVICE AND METER REQUIREMENTS FOR APPROVED METER BASES AND APPROVED LOCATIONS.

SELF CONTAINED
METERING – BUILDING

JAN 2013	1-PHASE METERING 120/240 VOLTS	MT1-B
BBEC		